# Visit Us Online

For more information about Basalite paving stones, retaining walls, accessories, patterns or installation instructions, visit us online at basalite.com.







605 Industrial Way Dixon, CA 95620 **800-776-6690**  11888 West Linne Road Tracy, CA 95376 **800-776-6690**  1201 Golden State Blvd Selma, CA 93662 **559-896-0753** 

CALIFORNIA • COLORADO • IDAHO • NEVADA • OREGON • WASHINGTON • BRITISH COLUMBIA www.basalite.com









©2012 Basalite® Concrete Products, LLC. All trademarks ® are registered trademarks.

The U.S. Green Building Council Member logo is a trademark owned by the U.S. Green Building Council and is used by permission.



www.basalite.com




# ARTISAN SLATE

**Interlocking Paving Stones** 


This sleek collection has the power to create a serene and soothing atmosphere and easily complements any home or landscape. Artisan Slate's subtle texture and natural beauty provides the look of real stone, with the strength and durability of an interlocking paving stone.

Above: Artisan Slate in Positano Cover: Artisan Slate in Positano


## Specifications



Style: Square Weight: 6 lbs Units/Pallet: 512 Sq. Ft./Pallet: 107




Style: Rectangle Weight: 8 lbs Units/Pallet: 384 Sq. Ft./Pallet: 121

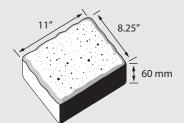


Style: Mega Weight: 19 lbs Units/Pallet: 160 Sq. Ft./Pallet: 102


#### Patterns




Interlace 80% rectangle and 20% square



40% mega,20% rectangle and 40% square

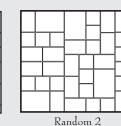

23% Mega, 48% rectangle and 29% square



Running Bond 100% rectangle

Herringbone 100% rectangle


## Typical Paver Installation\*

\*The installation instructions and illustrations shown are a basic overview of paver installation methods.

Because of the variety of applications, please refer to the Standard ICPI installation method or visit www.ICPI.org.

1. Excavate unsuitable, unstable or unconsolidated subgrade material and compact the area which has been cleared. Backfill and level with dense graded aggregate suitable for base material (typically 3" - 6" for pedestrian/light vehicular traffic and 8" - 10" for driveway applications), or as otherwise directed by site engineer/architect/landscape architect.

- 2. Install edge restraint using concrete curb, concrete toe or edging.
- 3. Place bedding course of sharp, normal-weight screening or concrete sand to a uniform depth of approximately 1" leveled to grade.
- 4. Install Basalite Pavers hand tight with joints approximately 1/8". Where required, cut stones with an approved cutter to fit accurately.
- 5. Tamp pavers with mechanical vibrator, uniformly level true to grade and free of movement.
- 6. Fill voids in joints by sweeping dry, fine, sharp sand over pavers.

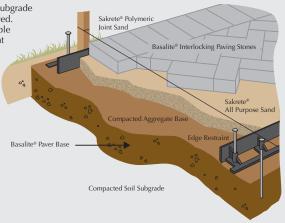

### Colors



Positano



Venice



Sienna



Milan



**Naples** 

NOTE: Printed colors shown in this brochure may vary from actual product colors. We recommend color selection be made from actual product samples.

Custom colors are available by special order - please contact your local dealer.